



VFD Programming
CTS Default User Settings

Drive: Yaskawa V1000

Motor: WEG, NORD

Voltage: 460V

Set the following parameters:

1. A1-02: 00
2. B1-01: 01
3. B1-02: 01
4. B1-03: 00
5. C1-01: 10
6. C1-02: 10
7. C6-01: 01
8. C6-02: 07
9. D1-01: 00
10. D1-02: 00
11. D1-03: 00
12. D1-04: 00
13. D1-17: 6
14. E1-01: 480
15. E1-03: F
16. E1-04: 60
17. E1-05: 480
18. E1-06: 60
19. E1-09: 1.5
20. E1-13: 00
21. E2-01: 1.47
22. E2-04: 4
23. E2-11: 0.75
- 24. H3-09: 2**
25. H4-02: 100
26. L1-01: 01
27. L3-04: 01

***PLC parameters only**